

Prepare and assemble the shelving

Read all three pages before starting. Assemble the unit before positioning it in the vehicle.

Before you start

Confirm that your kit fits your vehicle: **Ford Transit, Mercedes-Benz Sprinter, Dodge ProMaster or Nissan NV**. Installation may require two people.

Tools and supplies

Drill for mounting holes

Impact driver for assembly and setting tool

7/16 in nut driver for setting tool

3/8 in drill bit - confirm for your Plus Nuts

9/16 in wrench to hold setting tool

Plus Nut installation tool (listed as supplied)

Safety glasses and marker

WARNING / BEFORE EVERY HOLE

Inspect behind and underneath each proposed hole. Avoid electrical wiring, fuel lines, brake lines and other components. Drilling into them can cause death or serious injury. Wear safety glasses. Do not use excessive drilling pressure.

1 Fit the top tray

Find the side panel with position stickers and the tray marked **"Top"**. Match the marked positions. Attach the tray to both side panels with the supplied bolts and flanged nuts. Leave the bolts loose enough to align the remaining parts.

2 Fit the remaining trays

Attach the other trays to both side panels with bolts and flanged nuts. All trays except the top tray can be adjusted. Use the table for the lowest bottom-tray position.

Lowest bottom-tray position

Count holes upward from the bottom of the side panel.

VEHICLE	HOLE
Ford Transit / Nissan NV	1st
Mercedes-Benz Sprinter	2nd
Dodge ProMaster	7th

1st = lowest hole. Parts reference: page 3.

3 Attach the bottom angle


Secure the bottom angle underneath the unit using the **four provided attachment holes**. These are separate from the two floor drilling points on page 2.

4 Attach the back panel

Align the plastic back panel with the rear mounting holes. Secure it with bolts and flanged nuts.

5 Tighten the assembly

Align the panels and trays, then tighten the assembly fasteners to the kit requirements. Obtain missing torque specifications from the supplier.

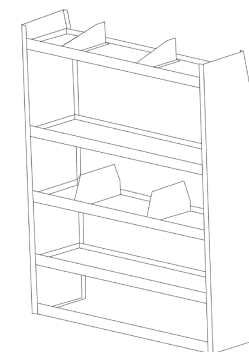

Assembled shelving unit

Secure the unit to the floor

Finish both the floor attachment and the upper attachment before using the shelving.

6 Position and mark

Place the unit in its intended position, over the wheel well where applicable. Mark **two floor drilling points through the lower mounting slots: one on each side**. Check that the upper brackets can reach suitable mounting locations.



Mark through a lower mounting slot.

7 Move aside and drill

Move the unit aside. Recheck behind and underneath both marks. Wear safety glasses and drill without excessive pressure. A **3/8 in drill bit** is listed; confirm the required hole size for the supplied Plus Nuts before drilling.

8 Install the Plus Nuts

Insert one **Plus Nut** (Figure A) into each prepared hole. Use the supplied installation tool (B), the impact driver with a **7/16 in nut driver**, and a **9/16 in wrench** (C).

Hold the tool with the wrench so that the **tool body and Plus Nut do not rotate** while the driver turns the setting bolt. Follow the tool requirements for setting the nut. Remove the tool after setting; leave the Plus Nut in place. If the anchor spins or remains loose, resolve the problem before attaching the unit.



A. Plus Nut anchors



B. Setting tool



C. Hold the tool body with the wrench.

9 Bolt the unit to the floor

Return the unit to its marked position. Align the lower mounting slots with the installed Plus Nuts. Insert the mounting bolts and tighten them to the kit requirements.

CONFIRM THE KIT REQUIREMENTS

Before drilling or tightening, confirm the hole diameter, suitable mounting locations and tightening requirements. Obtain any missing details from the supplier before proceeding.

Next: fit the top brackets on page 3.

INSTALLATION VIDEO



Scan to watch the installation

Or click this panel to open YouTube.

Fit the top brackets and check

The upper brackets are part of the installation. Do not stop after securing the floor bolts.

10 Secure the upper brackets


Position the top brackets between the unit and the vehicle. Confirm the mounting locations and fasteners for your vehicle and kit.

Mark. Mark vehicle holes through the brackets.

Check and drill. Inspect behind each mark. Drill to the confirmed hole size.

Install anchors. Install Plus Nuts as in step 8, where required by the kit.

Fasten. Secure each bracket to the vehicle and shelving unit. Tighten to the kit requirements.

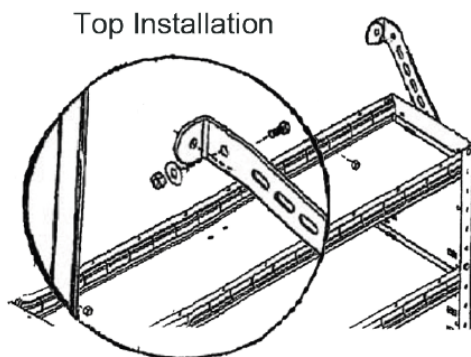

Upper-bracket arrangement. Use the mounting locations specified for your kit.

Check before use

- ☐ Floor bolts and all top-bracket connections are installed and secure.
- ☐ Trays, side panels, bottom angle and back panel are securely fastened.
- ☐ The unit is stable; no Plus Nut spins or remains loose.
- ☐ Shelving and fasteners do not interfere with doors, wiring or vehicle components.
- ☐ The permitted load and all kit-specific requirements have been confirmed.

Kit notes

Joining aluminium shelving units: use the longer joining bolt. Confirm its size and length with the supplier.

Door kit: obtain and follow the separate door-kit instructions before fitting doors.

Use the product only for its intended purpose and follow the kit requirements. Misuse can cause damage or injury and invalidate the warranty.

Identify the parts

Side panels

The two upright ends.

Trays / shelves

Includes the tray marked "Top".

Bottom angle

Lower mounting rail under the unit.

Plastic back panel

Attaches to the rear.

Top brackets

Secure the unit to the vehicle at the top.

Bolts and flanged nuts

Fasteners used to assemble the unit.

Plus Nuts

Threaded anchors installed in the vehicle.

PRODUCT SUPPORT



Scan for
contact details

true-racks.us